

Wireless Barcode Scanner User's Manual



Enter Setup

Introduction

This user manual is designed for laser wireless barcode scanner. For detailed usage manual information, please download the complete user manual from our website or obtain it from our distributor.

Part one:Receiver Setting

1.1 Setting steps

1. scan "Enter Setup"
2. scan function barcode you need
3. scan "Exit Setup"

1.2 Link scanner

Scan the "link scanner" barcode on receiver.

1.3 Receiver default

Tip: scan following "Receiver default" barcode.



Receiver default

XL\$RST|

"*" denotes default setting.

1.4 Working mode

Tip: no need to scan "Enter Setup", "Exit Setup", just scan following setting function barcode directly.

Auto mode: data will be stored in the scanner when no signal. Data will be transferred to receiver when signal recover.



*AUTO

XL\$AUT|

Immediate mode: data will be transferred to receiver immediately after each scan. Data will be lost immediately when no signal.



Immediate

XL\$IMT|



V9. 5. 4



Exit Setup



Enter Setup

Inventory mode

All data will be transferred to Flash memory after each scan.
Scan following "OUT" barcode, all data be transferred to receiver.
Scanner will be in "Inventory" mode automatically when all data is transferred well.



Inventory

XL\$IVT|



OUT

XL\$OUT|

1.5 Interface selection



USB / KB mode

PT02|



RS232 mode

PT01|



*Auto choose

PT00|

Receiver Tip: one beep means KB/USB mode, two beeps mean RS232 mode.

1.6 Baud rate



4800

BD03|



*9600

BD04|



19200

BD06|



115200

BD10|



Enter Setup

1.7 Parity check



*None

UC01|



Odd

UC04|



Even

UC03|



Space

UC02|



Mark

UC05|

1.8 Control flow



*CTS/RTS OFF

CR01|



CTS/RTS ON

CR01|

1.9 Keyboard language



*USA

SL01|



French

SL02|



UK

SL04|



German

SL03|



Turkey-Q

SL05|



Exit Setup



Exit Setup



Enter Setup



Danish

SL06|



Spanish

SL08|



Italian

SL09|



Universal

SL11|

1.10 Terminal



None

TE01|



Tab(0D0A)

TE02|



*Enter (0D)

TE03|



Space (20)

TE04|



Return(0A)

TE05|

1.11 Receiver beeper tone



Mute

BK00|



*On

BK01|



Low

BP01|



Exit Setup



Enter Setup



Medium

BP02|



*High

BP03|

1.12 Power setting Scanner power setting



*+10dB

PS06|



+20dB

PS09|

Receiver power setting



*+10dB

PM06|



+20dB

PM09|

Tip: scanner and receiver must be in same power.

1.13 Data transfer warning tone



*0FF

ST00|



0N

ST01|



Exit Setup



Start

Part two: Scanner Setting

2.1 Scanner and Receiver default setting
Tip: scan following 7 steps one by one.



① start



② Reset



③ start



④ RS232 mode



⑤ End



the "LINK SCANNER"
barcode on receiver

⑥ Link scanner



⑦ Receiver default

XL\$RST|

2.2 Scanner beeper tone

Tip: "Start" → Choose the "Beeper Tones"
→ "End".



Start



OFF



*ON



End



Start



Low



Medium



*High



End

2.3 Scan Mode

Tip: "Start" → Choose the "Scan Mode"
→ "End".



Start



*Manual Mode



Automatic Mode



End

2.4 Code 39 start and stop character transfer setting



Transfer



*Do not Transfer



End