

Barcode Scanner User Manual



V6.6.3



Start

Introduction

This user manual is quick start manual. For detailed manual information, please download the complete user manual from our website or obtain it from our distributor.

System Setting



Reset (Return to factory default)

Communication Interface



USB-KBW



USB virtual serial



USB-POS



RS232 serial port



PS2-KBW

Terminator



Terminal off



Terminal on*



End



Start



CR(0X0D)*



CR+LF(0X0D+0X0A)



TAB(0X09)

Read mode



Manual read mode*



Continuous read mode

Beep Tones



Sound enable*



Sound disable



Short



Middle*



Long



End



Start



Low frequency



Middle frequency*



High frequency

Serial Parameters

Baud Rate



1200



4800



9600*



19200



38400

Parity Check



None*



End



Start



Odd parity



Even parity

Data bits



7 Bits



8 Bits *

Stop bits



1 Bits*



2 Bits

Keyboard mode

Emulation keyboard



NO



OFF*



End



Start

Keyboard case control



Default *



Upper case



Lower case



Case swap

Number Lock



NO



OFF

Keyboard Language



USA *



French



Russia



End



Start



UK



Turkey



Danish



Japan



Spain



Italy

Barcode Enable and Disable



Enable all Barcodes



Disable all Barcodes



Disable Code 128



End



Start



Enable Code 128



Enable Code39



Disable Code39



Enable Code39 full ASCII



Disable Code39 full ASCII



Enable EAN 13



Disable EAN 13



Enable UPCA



Disable UPCA



End