


2D BARCODE SCANNER

— make scanning easy




V3.0.2EN

Parts Instruction

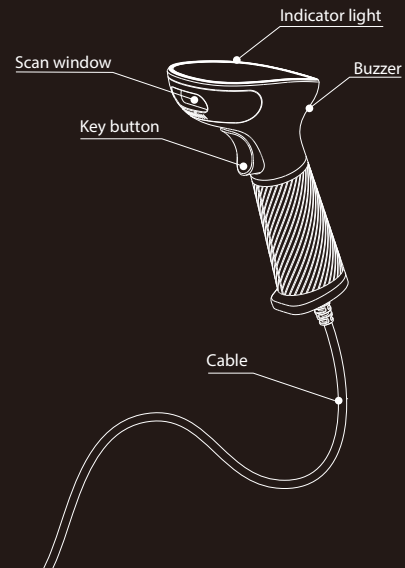


Connection Method

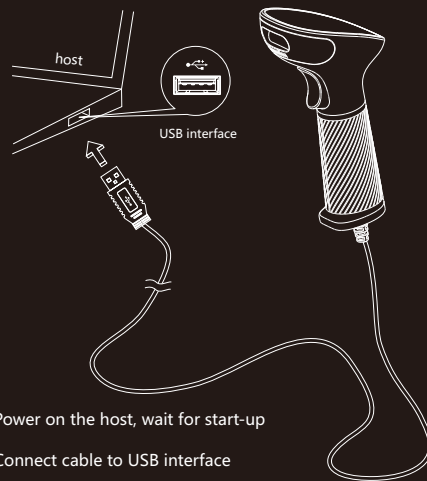

1. Power on the host, wait for start-up
2. Connect cable to USB interface
3. Scanner work after is identified successfully by the host

(Above this picture used for USB cable only)

Barcode Reading Method

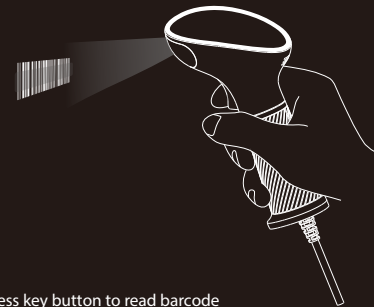

1. Press key button to read barcode
2. Keep the red aiming light in the center of a barcode
3. Zoom in & zoom out to find the best reading distance
4. After a successful reading, there will be a beep sound and a ring indicating light flashing, the aiming light die out, then the data will be sent to the host system.

Product Introduction

This simple user's manual is designed for 2D barcode scanner. For detailed usage manual information, please download the complete user manual from our website or obtain from our distributor. (* default setting)

System Settings



Factory Default

Caps Lock



*Original Data



Alphabet Always Upper Case



Alphabet Always Lower Case

Language



*USA



French



Italy



Germany

Language



Spain



Japan



Russia



Sweden

Language



Turkey Q



Finland



Universal

Terminal Character



CR



*CR/LF

Data Interface



*USB-KBW



RS232



USB Virtual Com
(Driver is needed for virtual serial port)

Scan Mode



*Manual



Automatic



ON
(Enable all default barcodes)



Inverse Code ON
(Enable read black & white inverse code)